

# VANGUARD MODELS

BY CHRIS WATTON

**\*\*1:64 Brodie Stove\*\***

## Recommended tools:

1. Sharp knife such as a scalpel, X-acto or Stanley.
2. Drill bits: 0.5mm, 0.6mm, 0.8mm
3. Needle/jeweller's files
4. Small tweezers
5. Liquid CA
6. Primer
7. Flat Black paint
8. Iron/Steel pigments

1.



Assemble the resin parts as shown here.

Use CA glue for this.

2.



Large BS-2


BS-8

3.



Small BS-2

4.

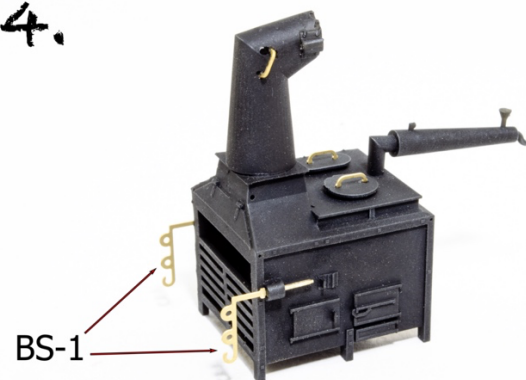

BS-1

5.



0.8mm  
Brass rod

6.




BS-3 on  
each  
corner

7.

0.5mm  
brass wire


BS-3a

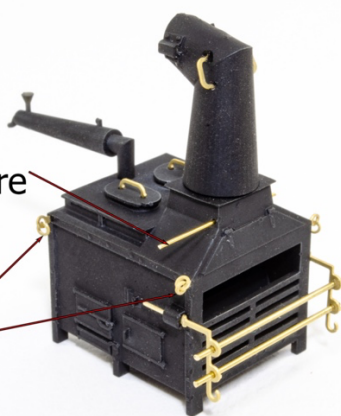

8.

BS-4

BS-5

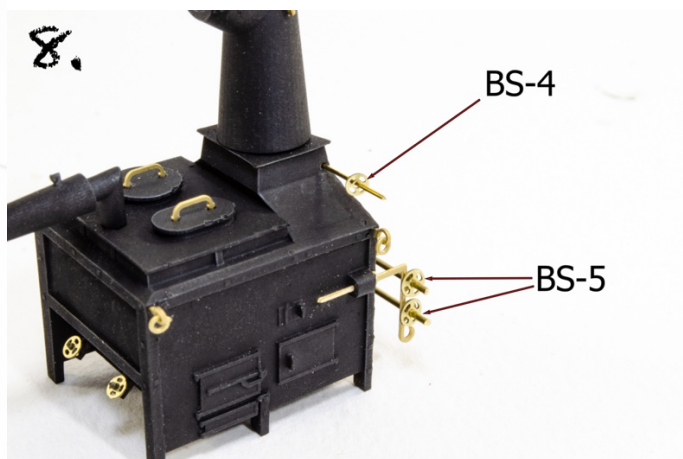


9.

BS-4

BS-7

BS-5

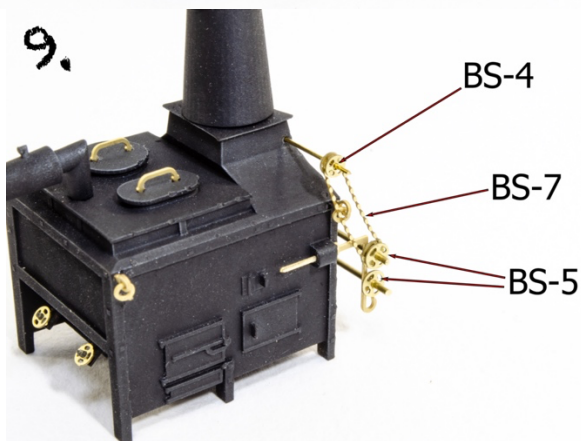


10.


BS-4

BS-6

BS-5

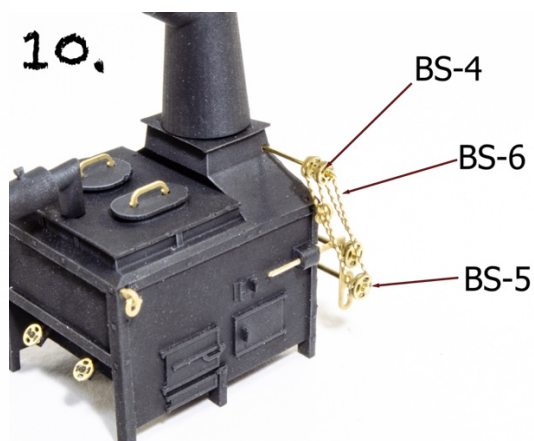


11.

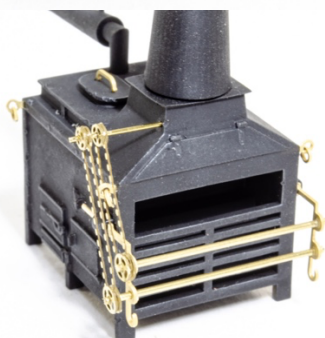

Completed chain assemblies

12.

BS-9

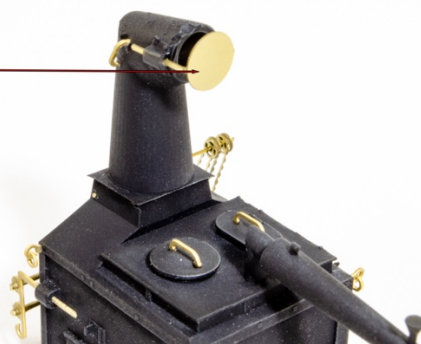

13.

Completed view




14.

Completed view




15.

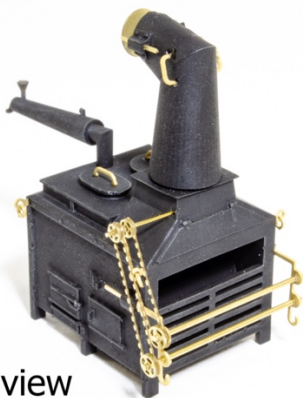

Completed view

16.

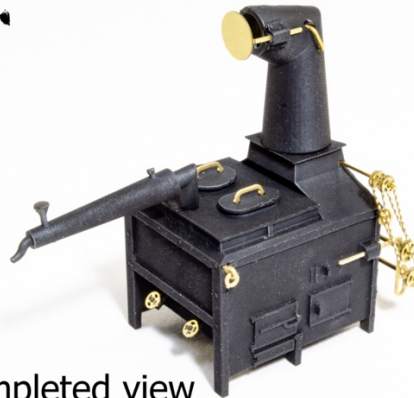

Completed view

17.



Painted view,  
finished with  
steel pigment.

18.



Painted view,  
finished with  
steel pigment.